

Unit  
**Accessory for Pentruder wall saws**Date  
2012-12-17

Rev



File  
Template for track foot.doc**43850101 Drill Template / 43850301 Template double - for symmetric track foot**

We have developed two different templates which can be used to simplify set up of the Pentruder wall saws. The templates are made for the symmetric track foot, i.e. not for the "old" type asymmetric track foot.



The templates will help position the track feet in the corners so that they don't have to be moved when cutting a door opening. See drawing on the following pages.

*43850101 Drill Template**43850301 Template double*



**Example 1 with 43850101 Drill Template: Track on the inside of the cut.**

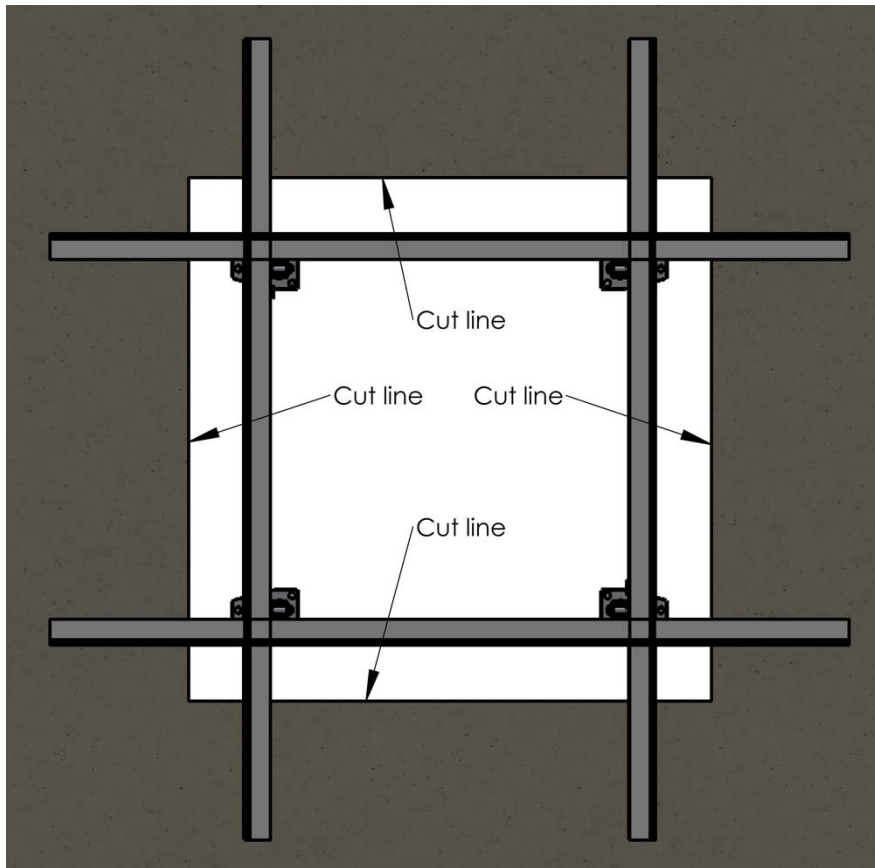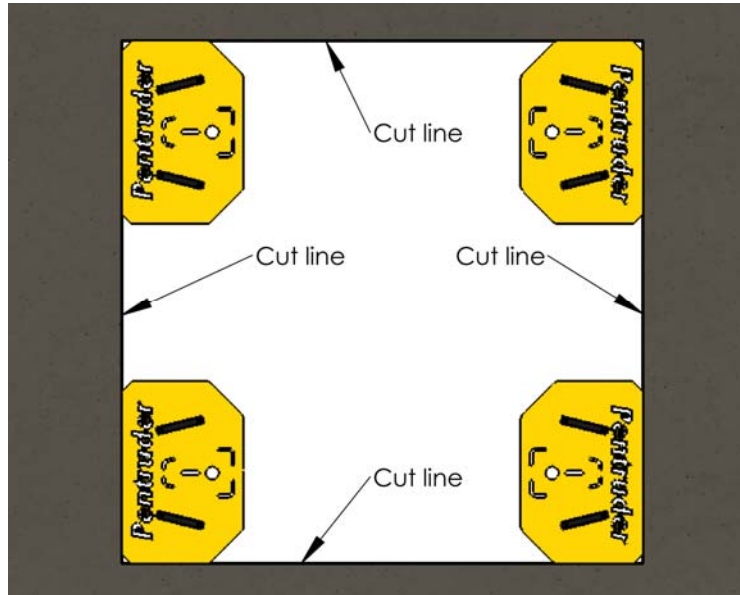

**Example 2 with 43850101 Drill Template: Track on the outside of the cut**

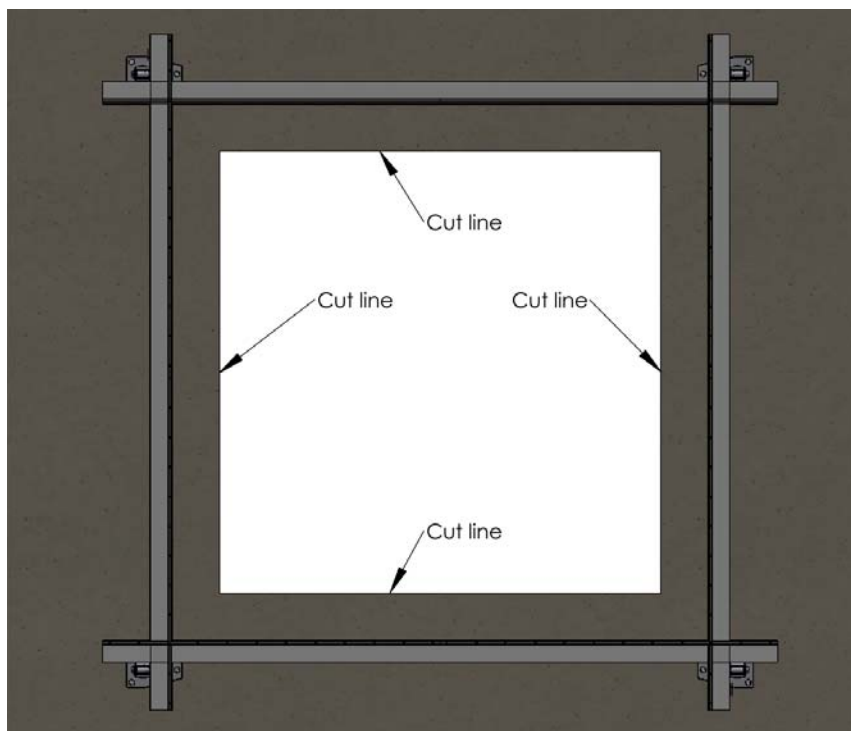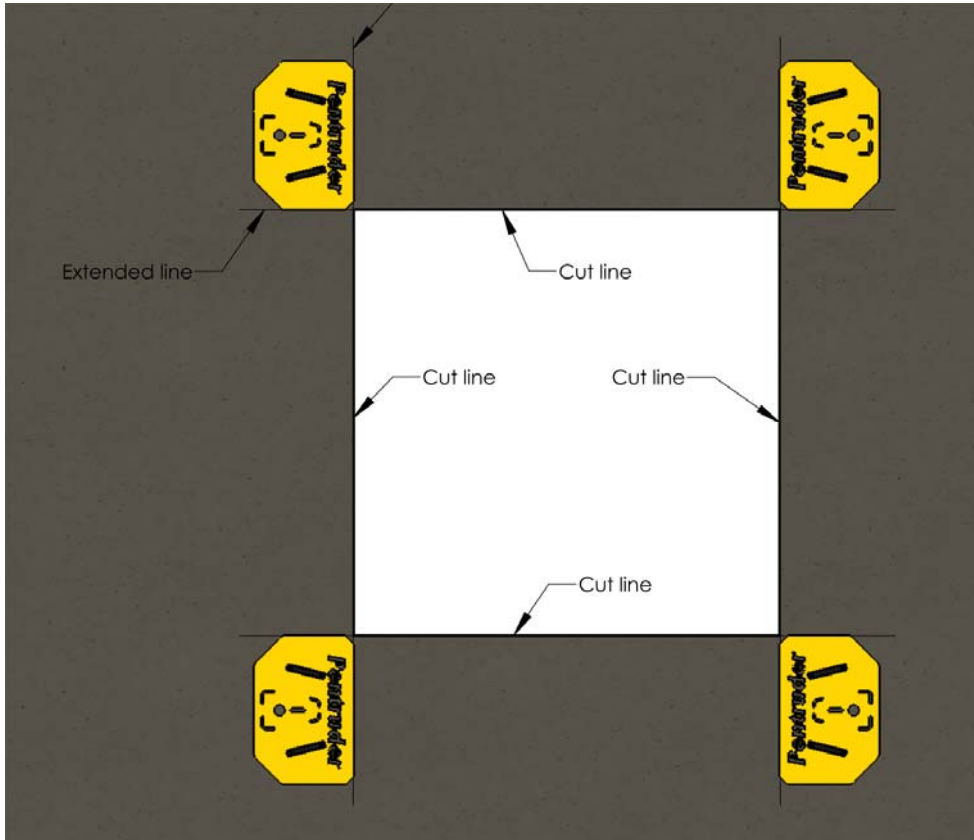


**Example 3 with 43850301 Template double: Track on the inside of the cut**

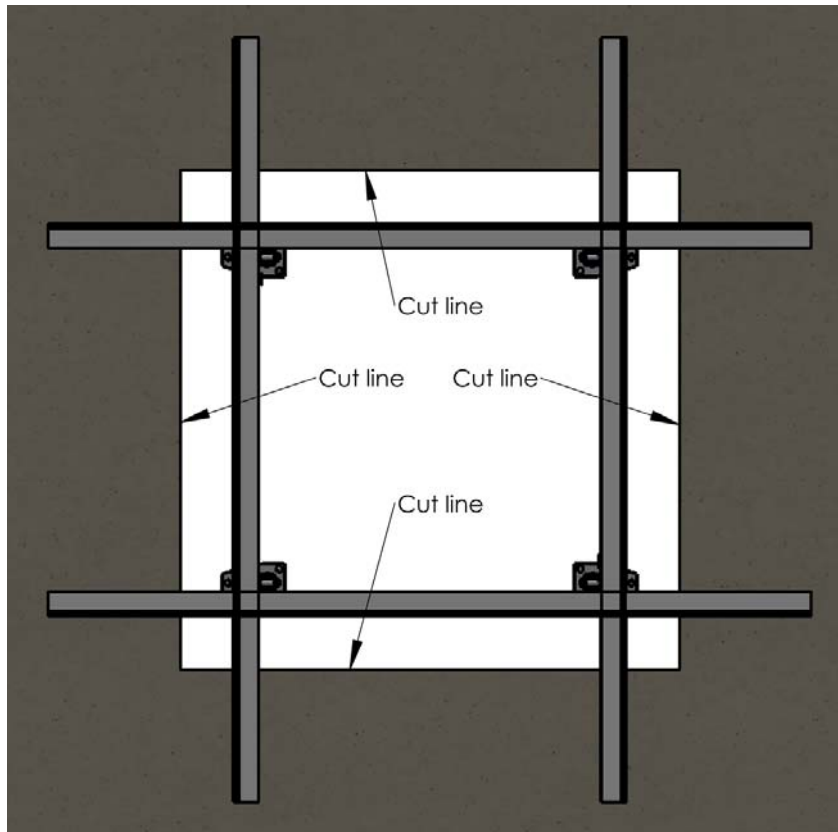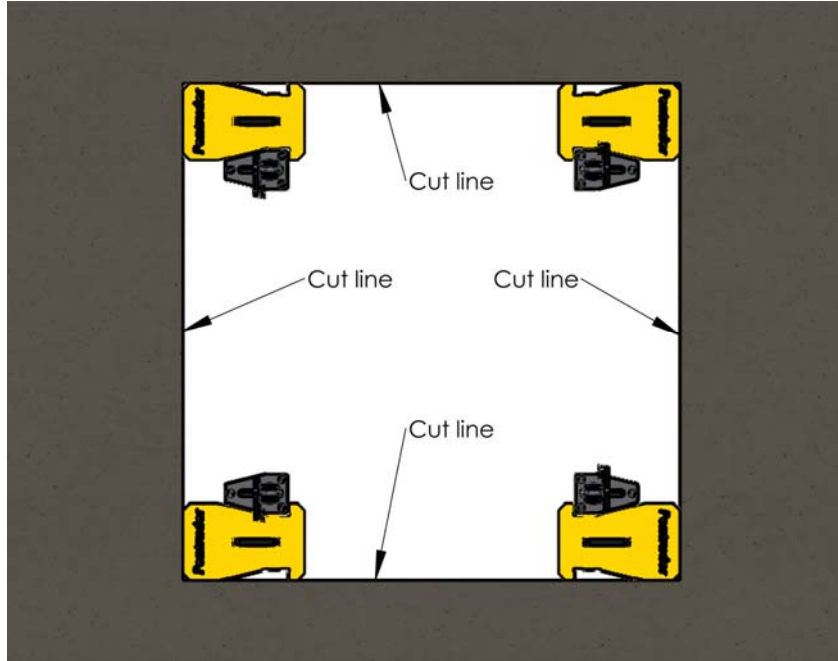

**Example 4: 43850301 Template double: Cut lines with different setups**

This picture shows all possible positions of the track foot to achieve the cut lines shown.

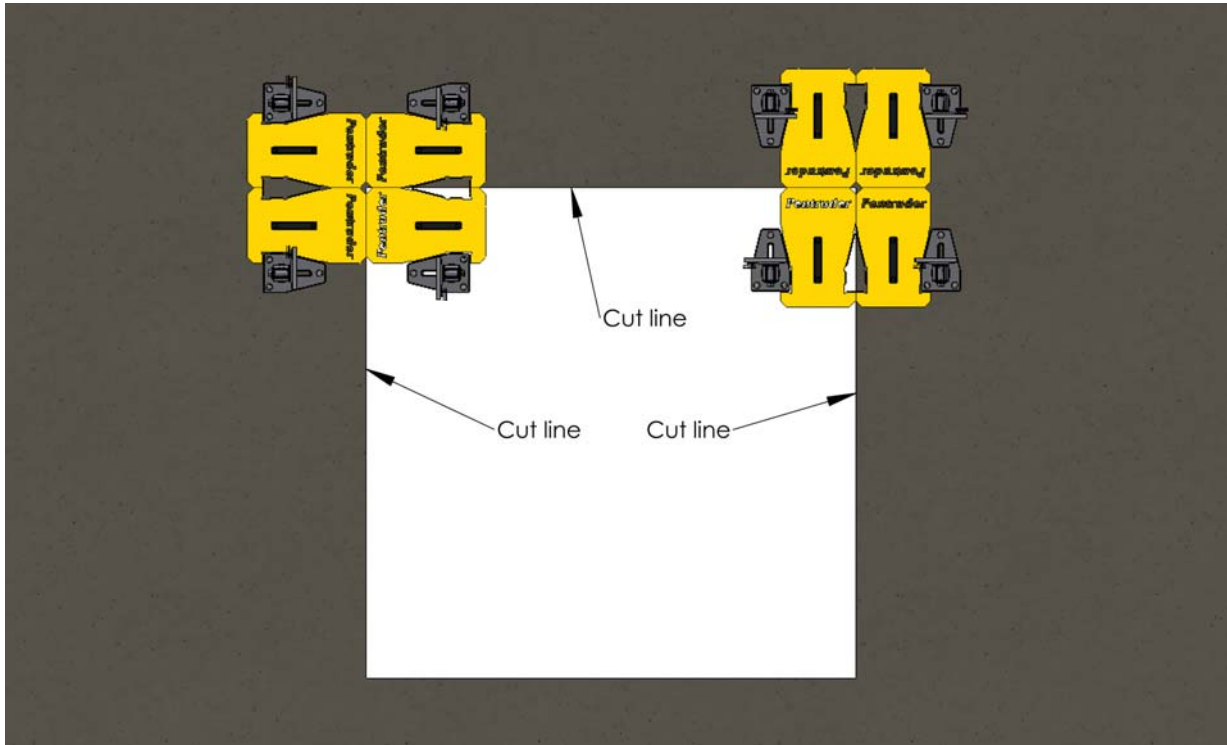

**A common setup for a square opening.**

